

INSTALLATION INSTRUCTIONS



TGI-311392 (INSTALLATION INSTRUCTIONS, INTERIOR DOOR PANELS, 4RUNNER, 1984-1988)

	NOTICE Read instructions completely before installing this product. Refer back to the instructions frequently during installation.		CAUTION Flying Object Hazard. Fluid Splash Hazard. Wear safety glasses at all times when working on vehicle.
--	--	--	--

 **WARNING**
Cancer and Reproductive Harm –
www.P65Warnings.ca.gov



TGI-311392

INSTALLATION INSTRUCTIONS



STEP 1

If you don't have the OEM door panel, proceed to step 8.

STEP 2

Start by removing the pull handle.



STEP 3

Remove all handle trim bezels.

STEP 4

For models equipped with a safety light, it's held by two Phillips screws. Once removed, unplug the harness.

STEP 5

To remove the window crank, locate the pin directly behind it and pull to release the crank.

STEP 6

Remove all push clips from the door panel. Take care with these as they may risk breaking the OEM panel. It's recommended to use a combination of panel poppers and a trim removal tool.

INSTALLATION INSTRUCTIONS




STEP 7

The remaining attachment for the OEM door panel is the metal clips at the top. Use a trim removal tool to pry each clip out easily.

STEP 8

Once the OEM panel is fully removed, take out all remaining push clip ends from the door.

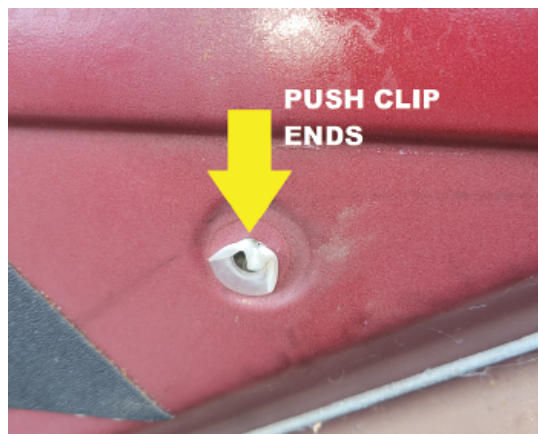


STEP 9

It's advisable to spray-paint the handles and/or their brackets black.



STEP 10

Place the panel on the door and start fixing all the push-in rivets along the door. If some rivets are stubborn, lightly tap them with a rubber mallet.

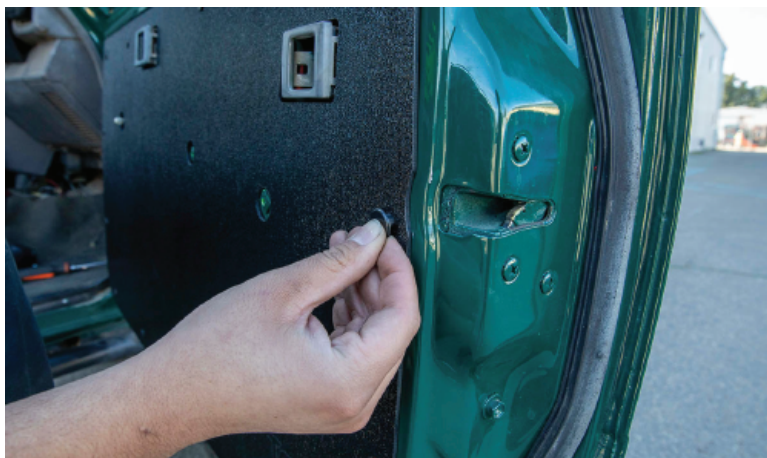

STEP 11

Reinstall the window crank onto the door. *Note: Be cautious as the pin for the window crank can fall into the panel hole. It's recommended to handle this step with proper tools.



INSTALLATION INSTRUCTIONS



STEP 12

Reattach the pull handle onto the door.



STEP 13

Repeat this process for the opposite side.