




WHEELER'S REAR SUPERBUMP KIT FOR LC250 LAND CRUISER

RECOMMENDED TOOLS

Safety Glasses
Metric Ratchet & Socket Set
Hex Key Set



	NOTICE Read instructions completely before installing this product. Refer back to the instructions frequently during installation.		CAUTION Flying Object Hazard. Fluid Splash Hazard. Wear safety glasses at all times when working on vehicle.
 WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov			

WOR-312711

WHEELER'S OFF-ROAD

5356 PINE AVE • FRESNO, CA • 93727 USA
514.474.2879 • WHEELERSOFFROAD.COM

CAUTION

1. Read all instructions completely and carefully before you begin. If anything is not clear, please call our tech support line at 1.877.4X4.TOYS or 559.252.4950 or e-mail tech@trail-gear.com before proceeding.

Check to make sure the kit is complete and that no parts are missing. If anything is missing, please contact

2. Trail-Gear at 1.877.4X4.TOYS or 559.252.4950 or tech@trail-gear.com.

Park vehicle on a clean, dry, flat, level surface and block the tires so the vehicle cannot roll in either

3. direction.

This product is for off-road use only. It is recommended that the installation steps below be performed by a competent mechanic. Buyers and users of this product hereby expressly assume all risks associated with the installation and use of this product.

5. This installation is typical for most ring & pinion gears. Some vehicles may vary. If necessary, refer to the proper Factory Service Manual for the year and model of your vehicle.

INSTALL INSTRUCTIONS

STEP 1


Place the rear of the vehicle on Jack stands. Remove the rear passenger side wheel

STEP 2

Remove the stock rear bump stop by loosening & removing the (3) mounting bolts. Save the mounting bolts for reinstallation.

STEP 3

Assemble the SuperBump as shown below. Make sure to apply the included threadlocking compound to the threads on the socket nut.

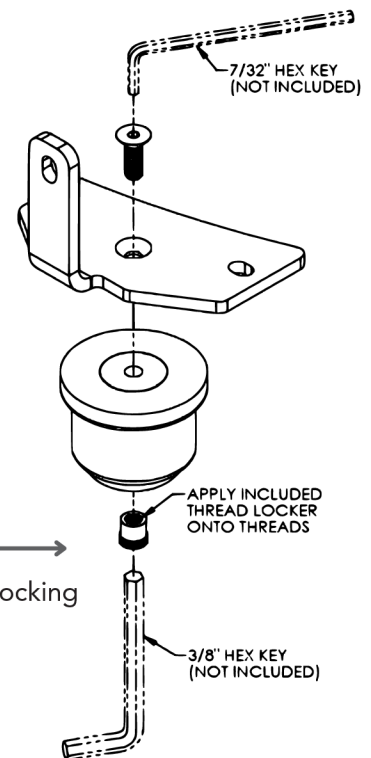

WOR-312711

WHEELER'S OFF-ROAD

5356 PINE AVE • FRESNO, CA • 93727 USA
514.474.2879 • WHEELERSOFFROAD.COM

INSTALL INSTRUCTIONS (CONT'D)

STEP 4

Install the SuperBump onto the frame using the stock mounting bolts removed in Step 1-4.

STEP 5


Reinstall the wheel and tighten the lug nuts to the torque listed in your Owner's Manual.

STEP 6

Repeat Steps 1-5 for the rear driver side of the vehicle.

STEP 7

Lower the vehicle and remove the jack stands. Make sure all bolts are tight.

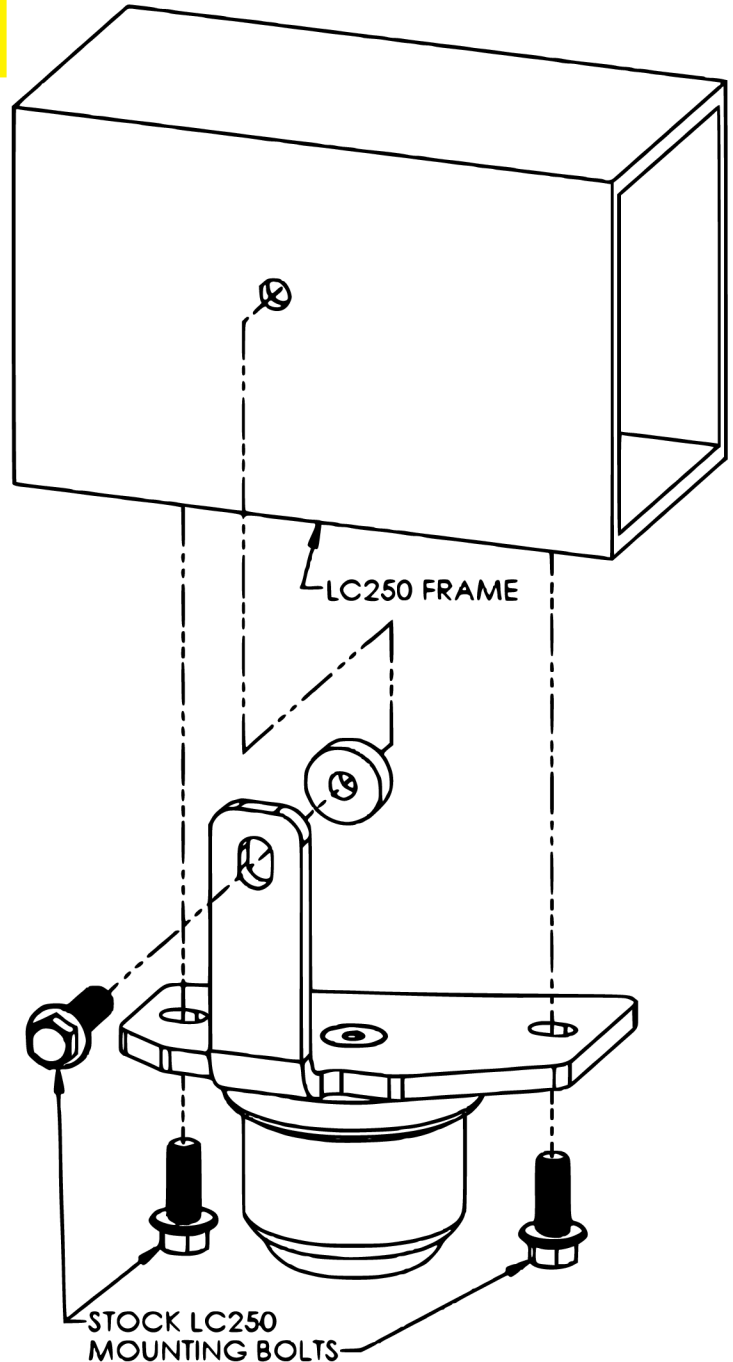

WOR-312711

WHEELER'S OFF-ROAD

5356 PINE AVE • FRESNO, CA • 93727 USA
514.474.2879 • WHEELERSOFFROAD.COM